




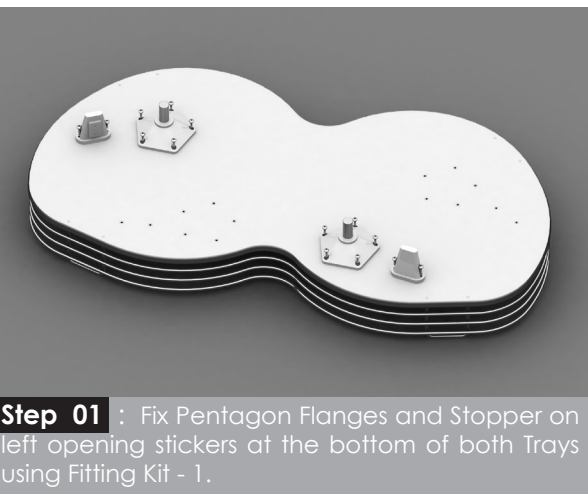


Step 01 : Fix Pentagon Flanges and Stopper on left opening stickers at the bottom of both Trays using Fitting Kit - 1.

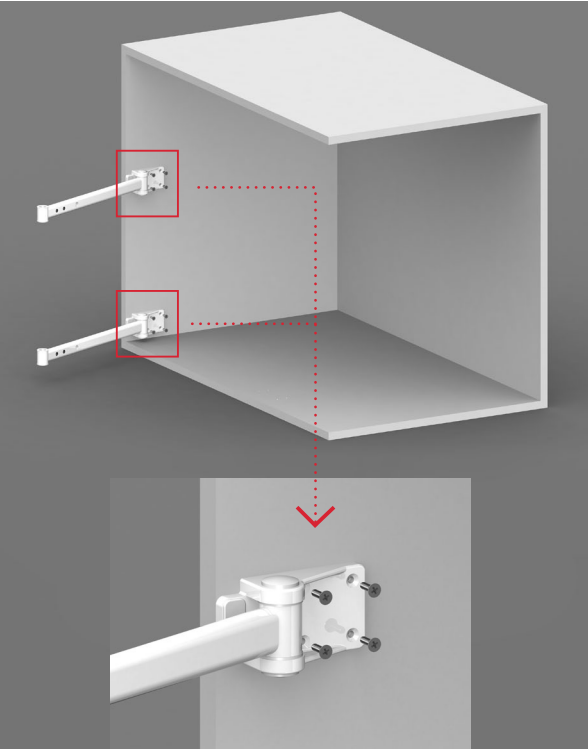


Step 02 : Fix both Hinge Arms using Side template and Fitting Kit - 2.

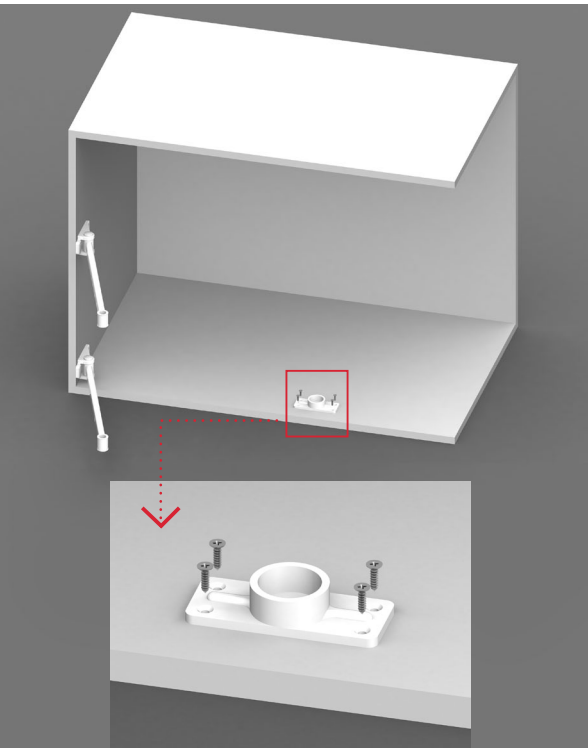


Step 03 : Fix Pipe Bottom Bracket using Bottom Template and Fitting Kit - 2.

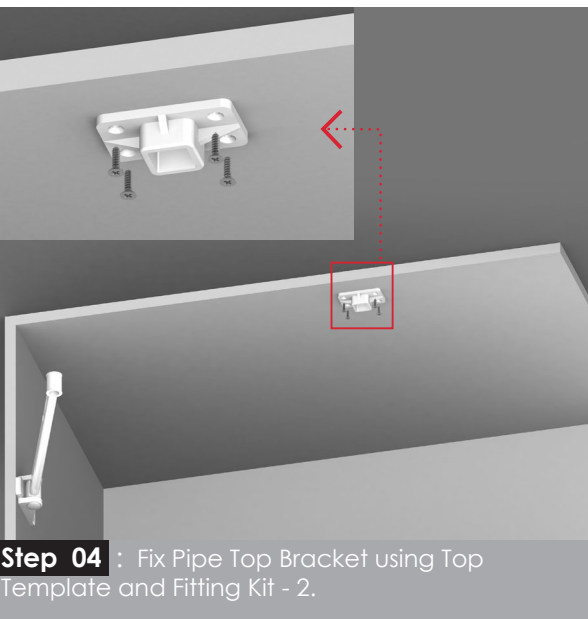


Step 04 : Fix Pipe Top Bracket using Top Template and Fitting Kit - 2.

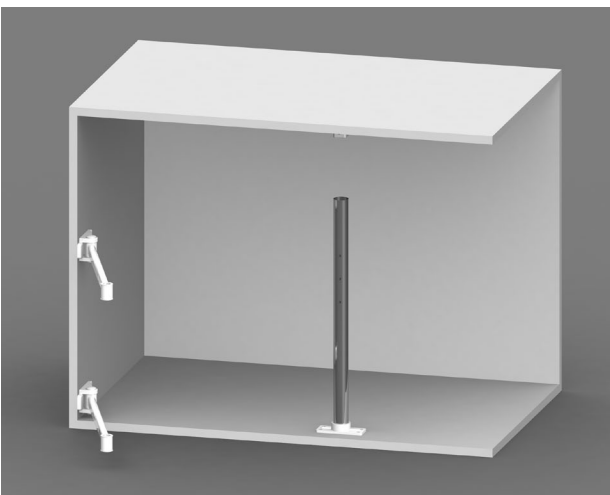


Step 05 : Place the Round Pipe inside Pipe Bottom Bracket.

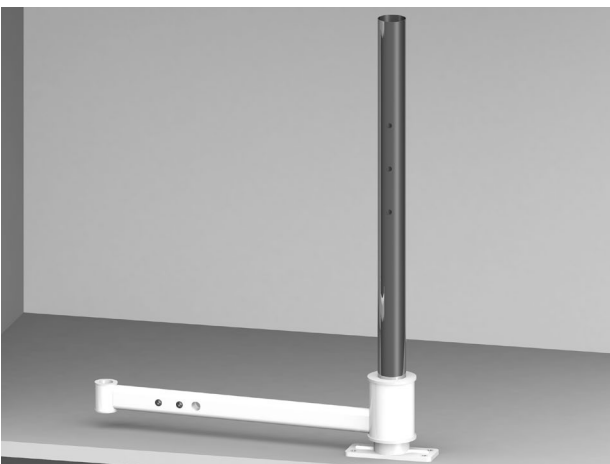


Step 06 : Slide the Pipe Arm through Round Pipe and place it on the Pipe Bottom Bracket as shown in the picture.

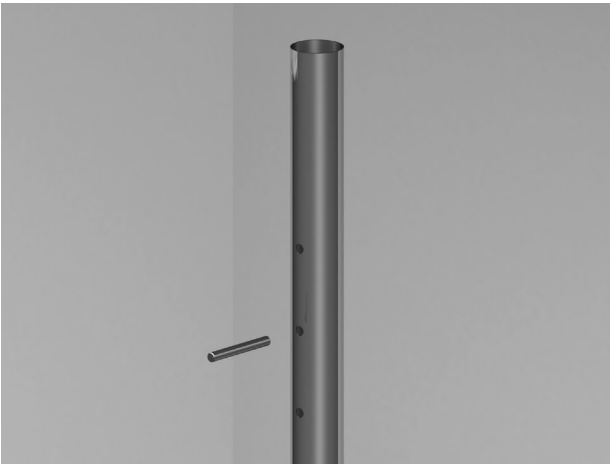


Step 07 : Slide Pin into the Pipe.

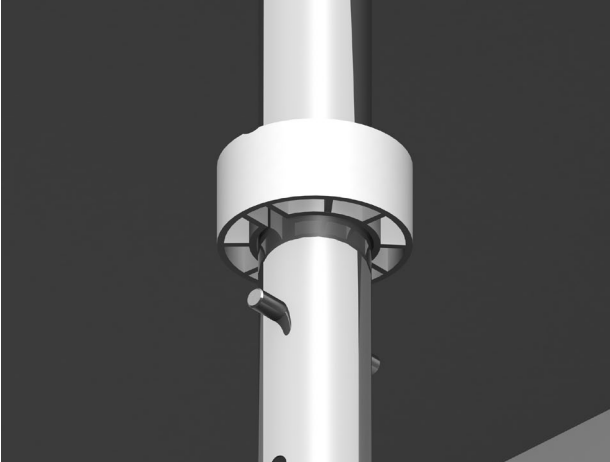

Step 08 : Slide the Bush through the Round Pipe and place it on Pin.

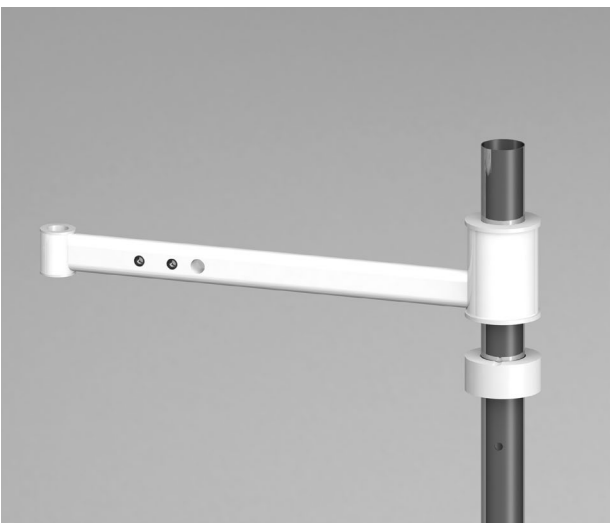


Step 09 : Slide Pipe Arm through the Round Pipe and place it on Bush.

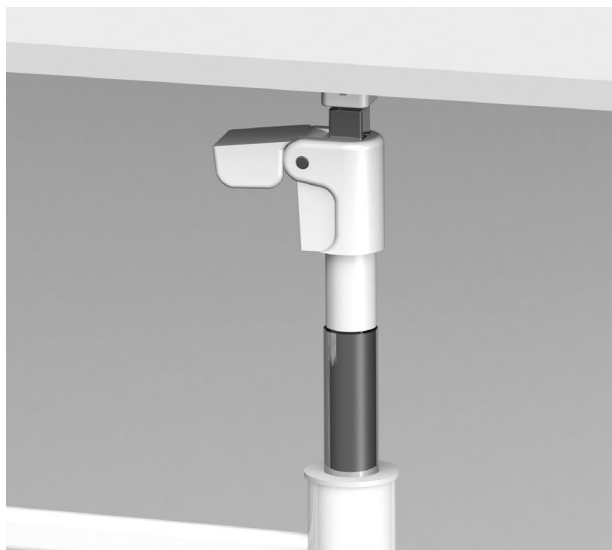


Step 10 & 11 : First slide Square Pipe into Pipe Clamp and then fix the whole assembly on top of the Round Pipe.




Step 12 : Pull the Square Pipe upto the Pipe Top Bracket as shown in picture.

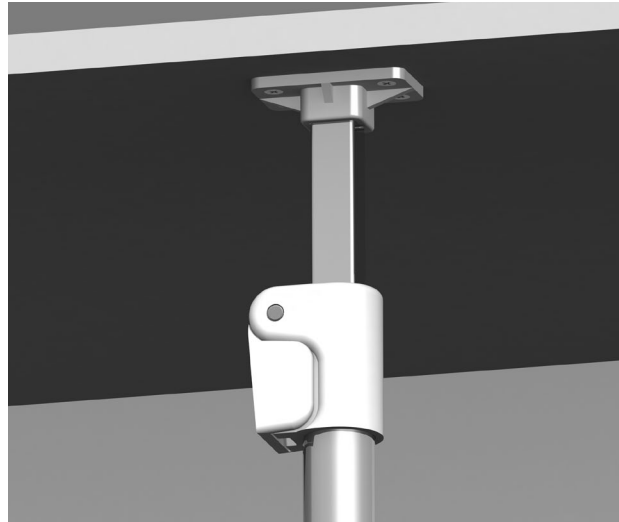


Step 13 : Lock the Pipe Clamp.

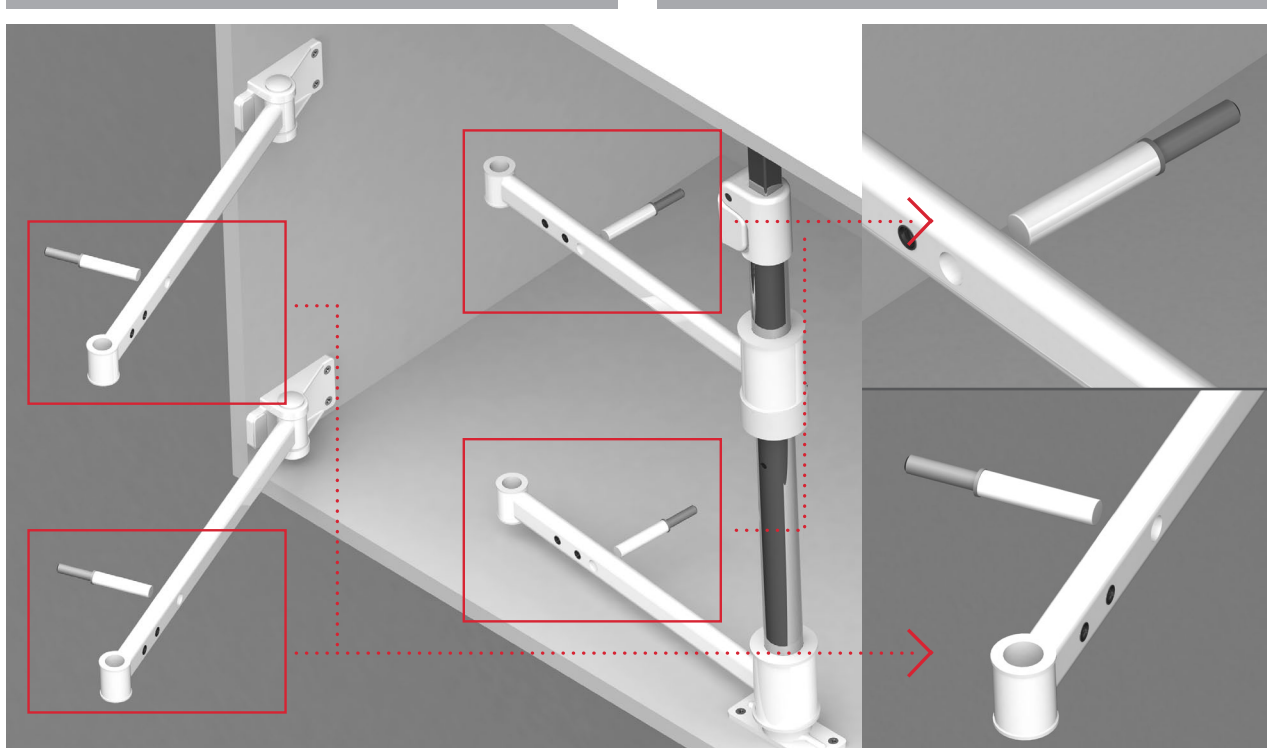


Step 14 : Slide the 2 Shock Absorbers through the Hinge Arms and slide other 2 Shock Absorbers through Pipe Arms as shown in the picture.

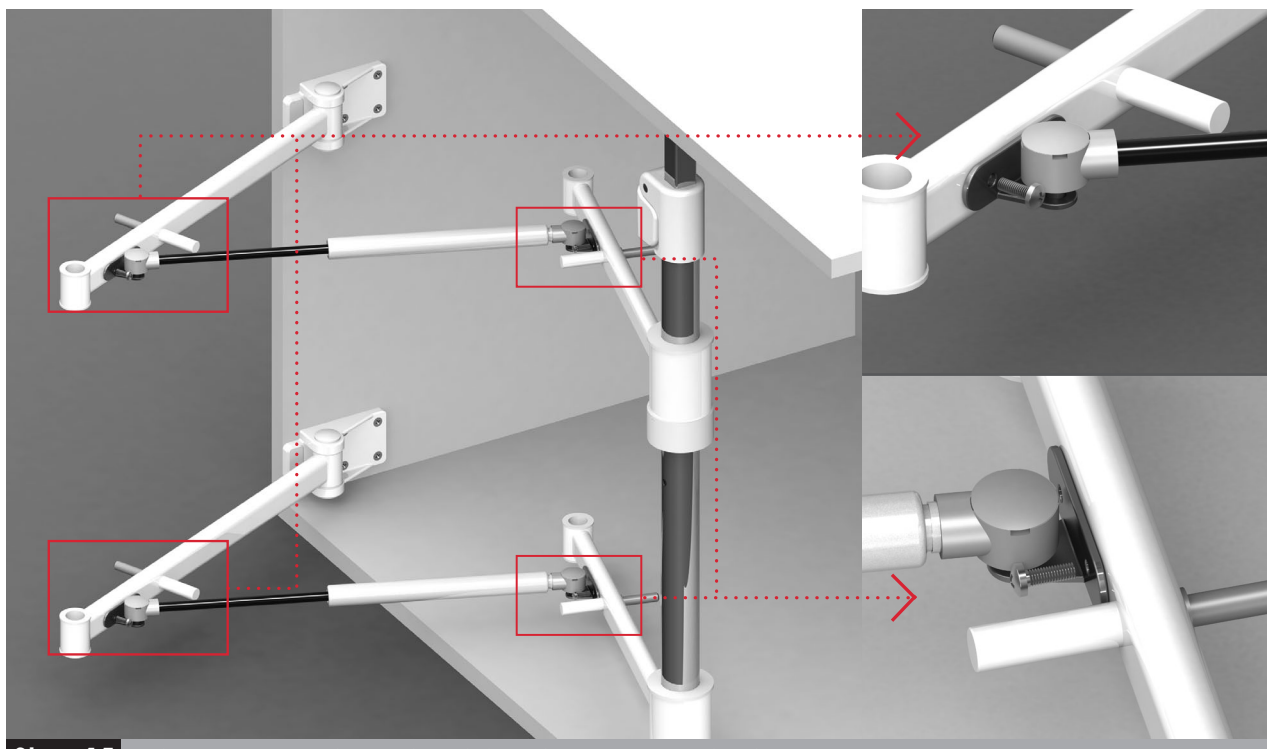







Step 15 : Fix both Gas Springs using Fitting Kit - 3 as shown in picture.

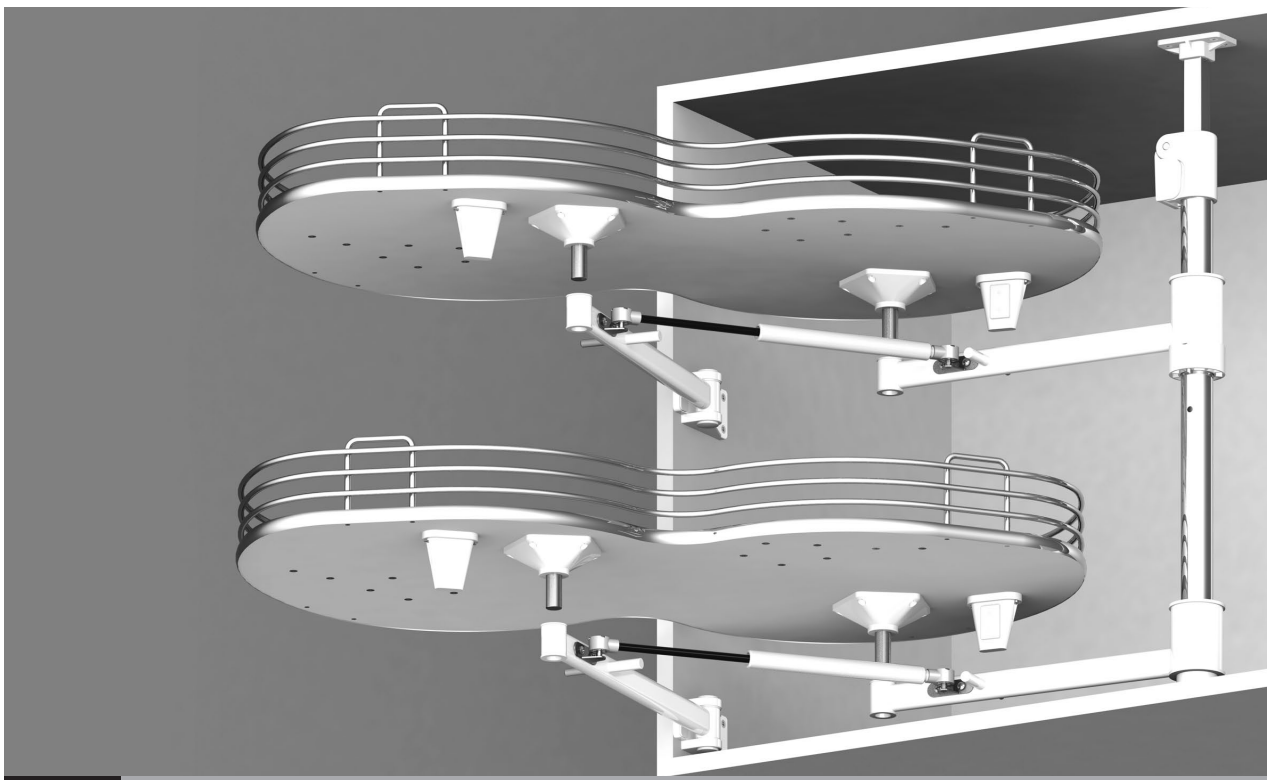

Step 16 : Place both the Trays on Arms as shown in picture.

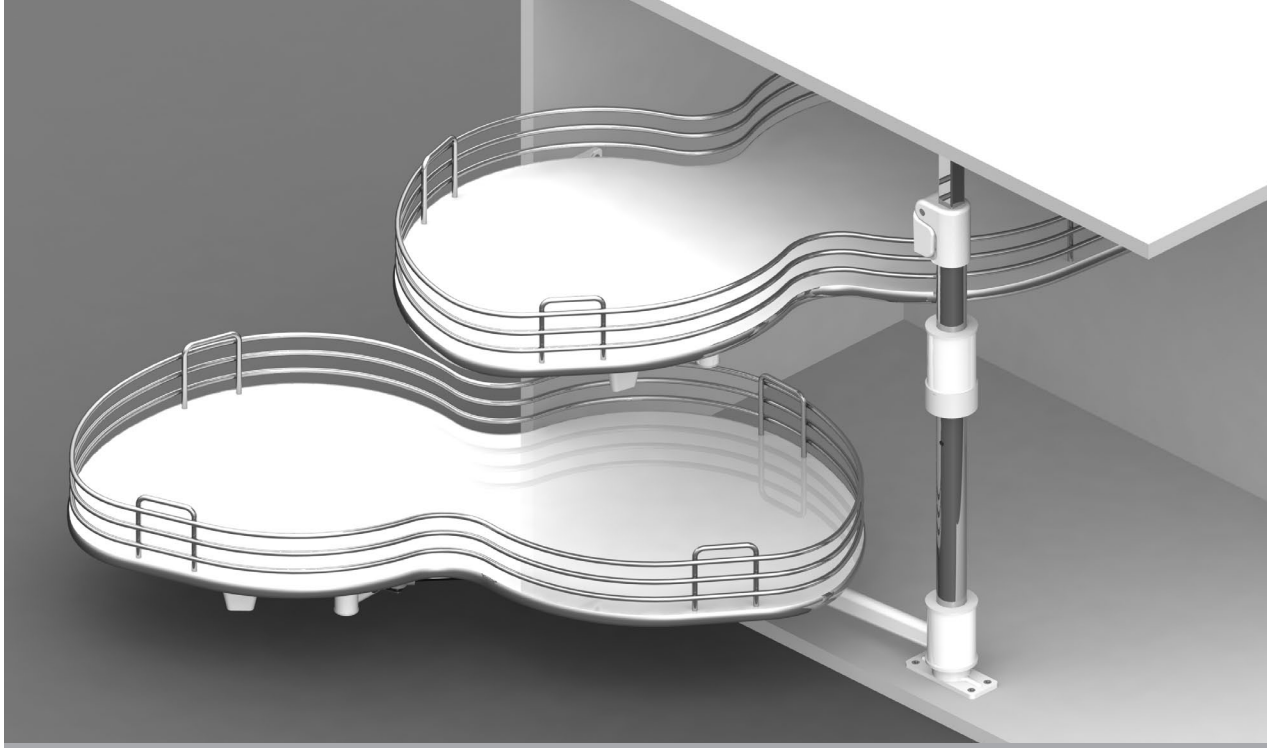

Installation Complete !! ENJOY YOUR GO FLOW !!

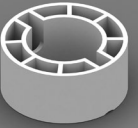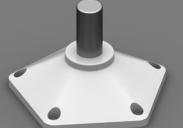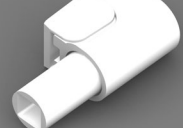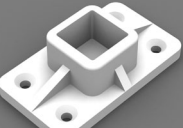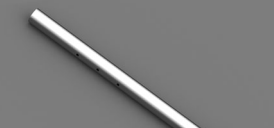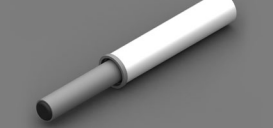 Bush Quantity : 1 Piece	 Gas Spring Quantity : 2 Pieces	 Hinge Arm Quantity : 2 Pieces	 Pentagon Flange Quantity : 4 Pieces
 Pin Quantity : 1 Piece	 Pipe Arm Quantity : 2 Pieces	 Pipe Bottom Bracket Quantity : 1 Piece	 Pipe Clamp Quantity : 1 Piece
 Pipe Top Bracket Quantity : 1 Piece	 Round Pipe Quantity : 1 Piece	 Shock Absorber Quantity : 4 Pieces	 Square Pipe Quantity : 1 Piece
 Stopper Quantity : 4 Pieces	 Tray Quantity : 2 Pieces		

Go Flow

Installation Guide


Packing List

SpitzeTM
by Everyday


Installation Guide (Left Opening)

Packing List


Step 01 : Fix Pentagon Flanges and Stopper on right opening stickers at the bottom of both Trays using Fitting Kit - 1.

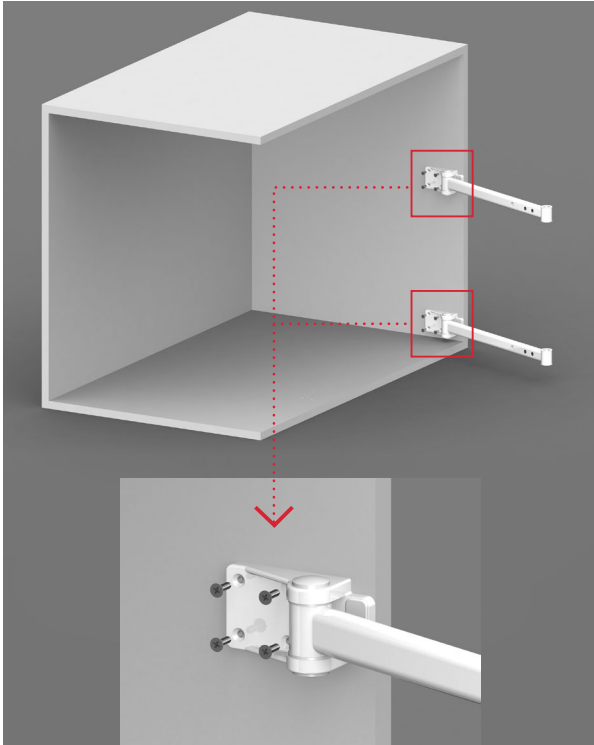


Step 02 : Fix both Hinge Arms using Side template and Fitting Kit - 2.

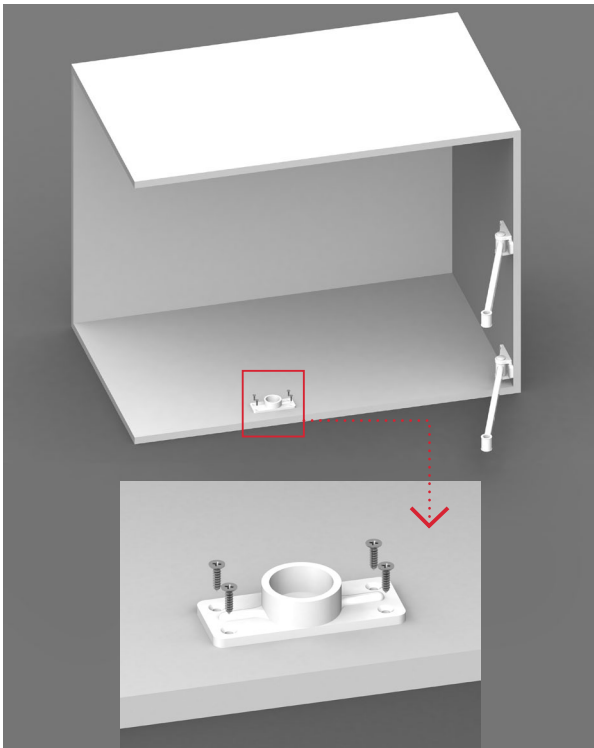

Step 03 : Fix Pipe Bottom Bracket using Bottom Template and Fitting Kit - 2.

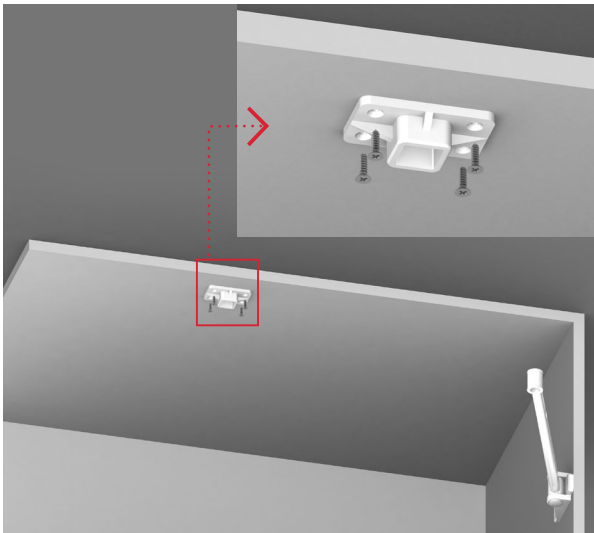


Step 04 : Fix Pipe Top Bracket using Top Template and Fitting Kit - 2.

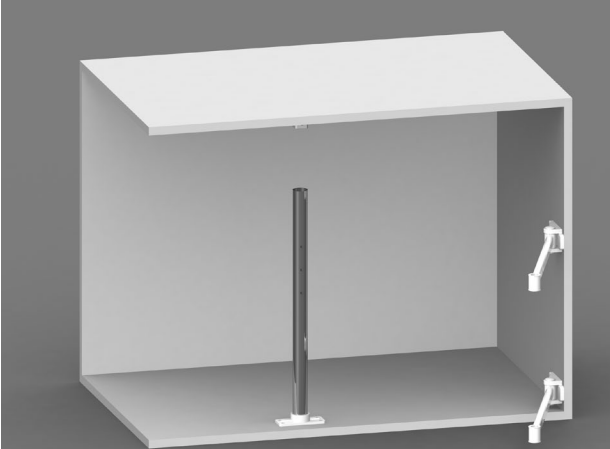


Step 05 : Place the Round Pipe inside Pipe Bottom Bracket.



Step 06 : Slide the Pipe Arm through Round Pipe and place it on the Pipe Bottom Bracket as shown in the picture.

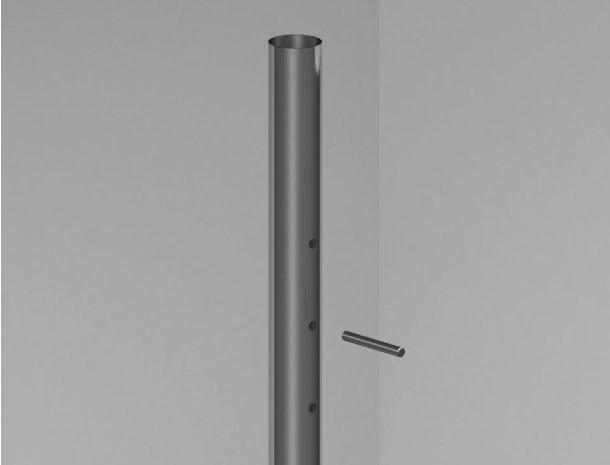

Step 07 : Slide Pin into the Pipe.

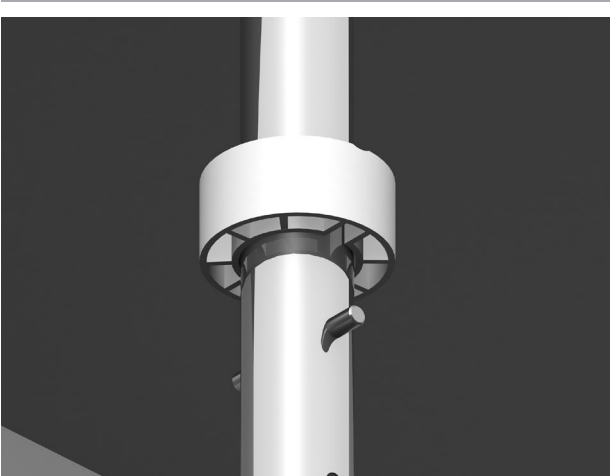


Step 08 : Slide the Bush through the Round Pipe and place it on Pin.




Step 09 : Slide Pipe Arm through the Round Pipe and place it on Bush.




Step 10 & 11 : First slide Square Pipe into Pipe Clamp and then fix the whole assembly on top of the Round Pipe.

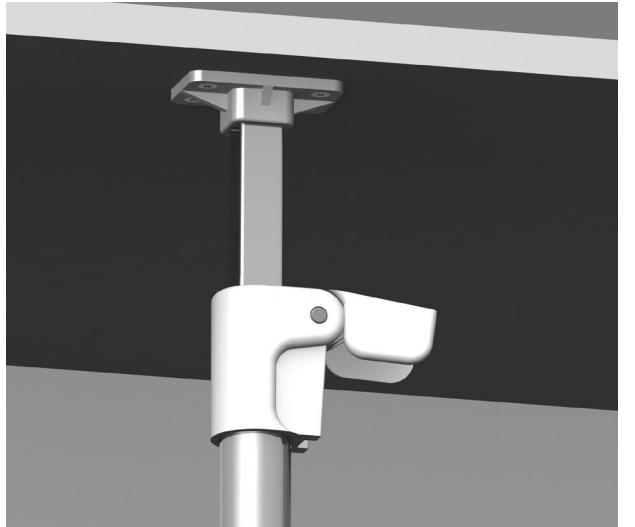


Step 12 : Pull the Square Pipe upto the Pipe Top Bracket as shown in picture.

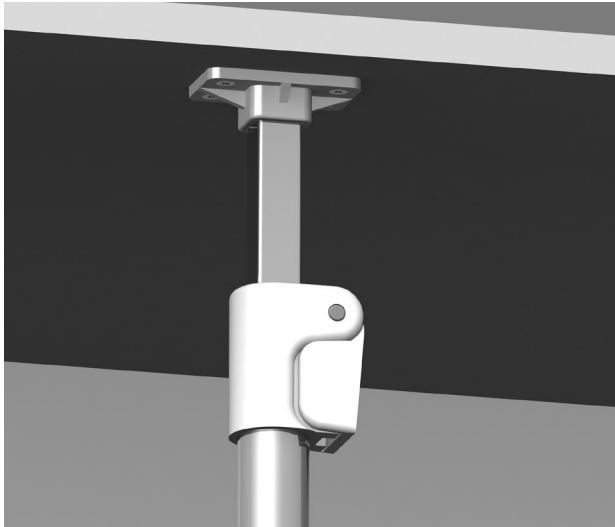


Step 13 : Lock the Pipe Clamp.

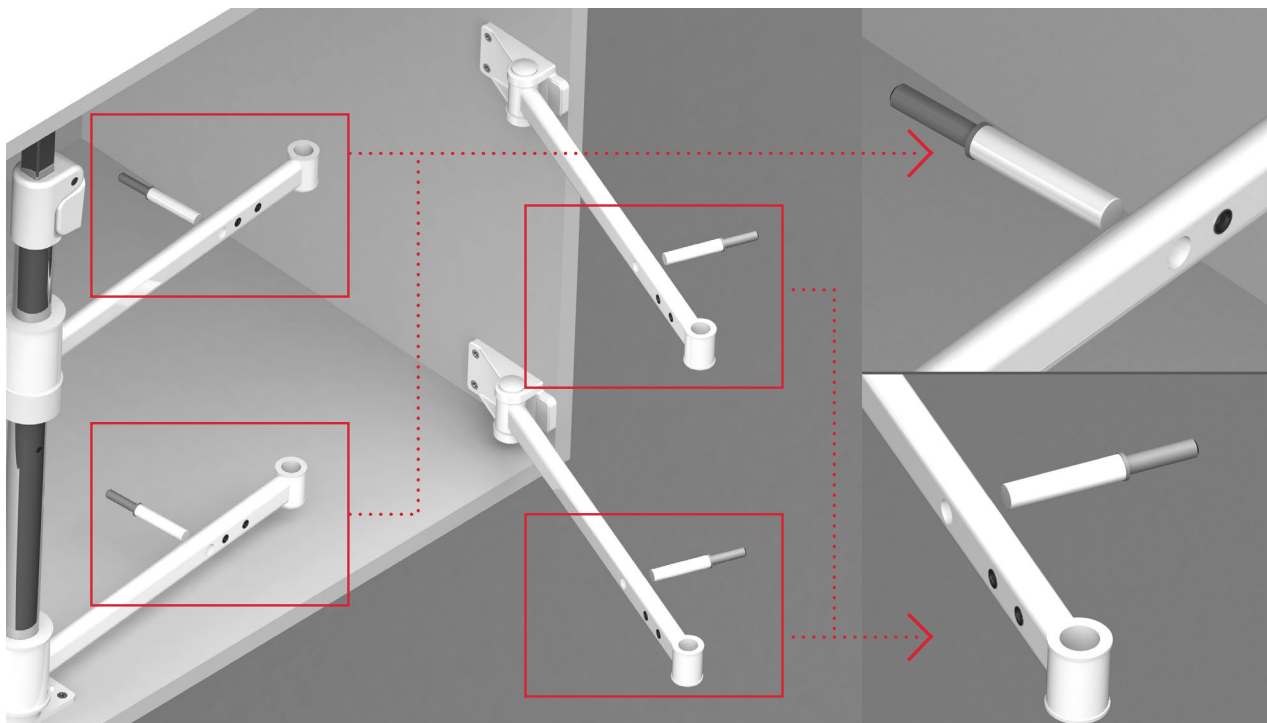


Step 14 : Slide the 2 Shock Absorbers through the Hinge Arms and slide other 2 Shock Absorbers through Pipe Arms as shown in the picture.

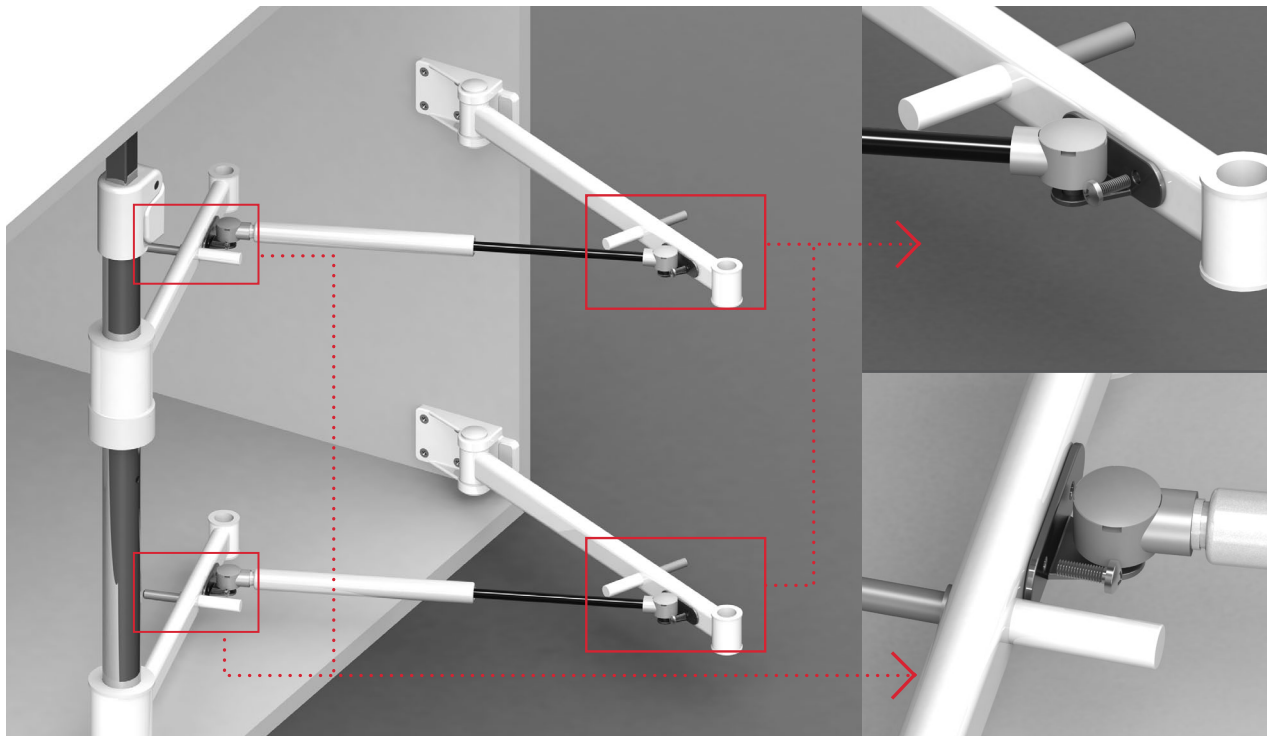






Step 15 : Fix both Gas Springs using Fitting Kit - 3 as shown in picture.

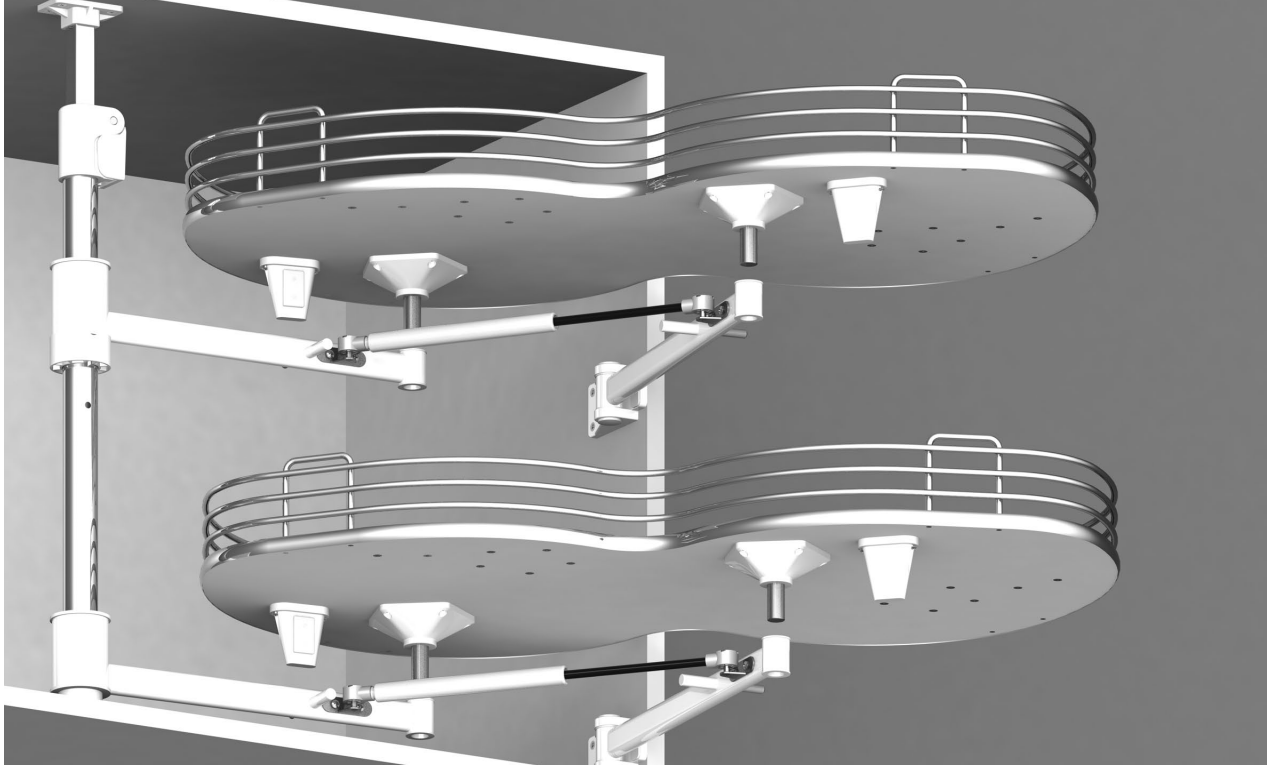

Step 16 : Place both the Trays on Arms as shown in picture.

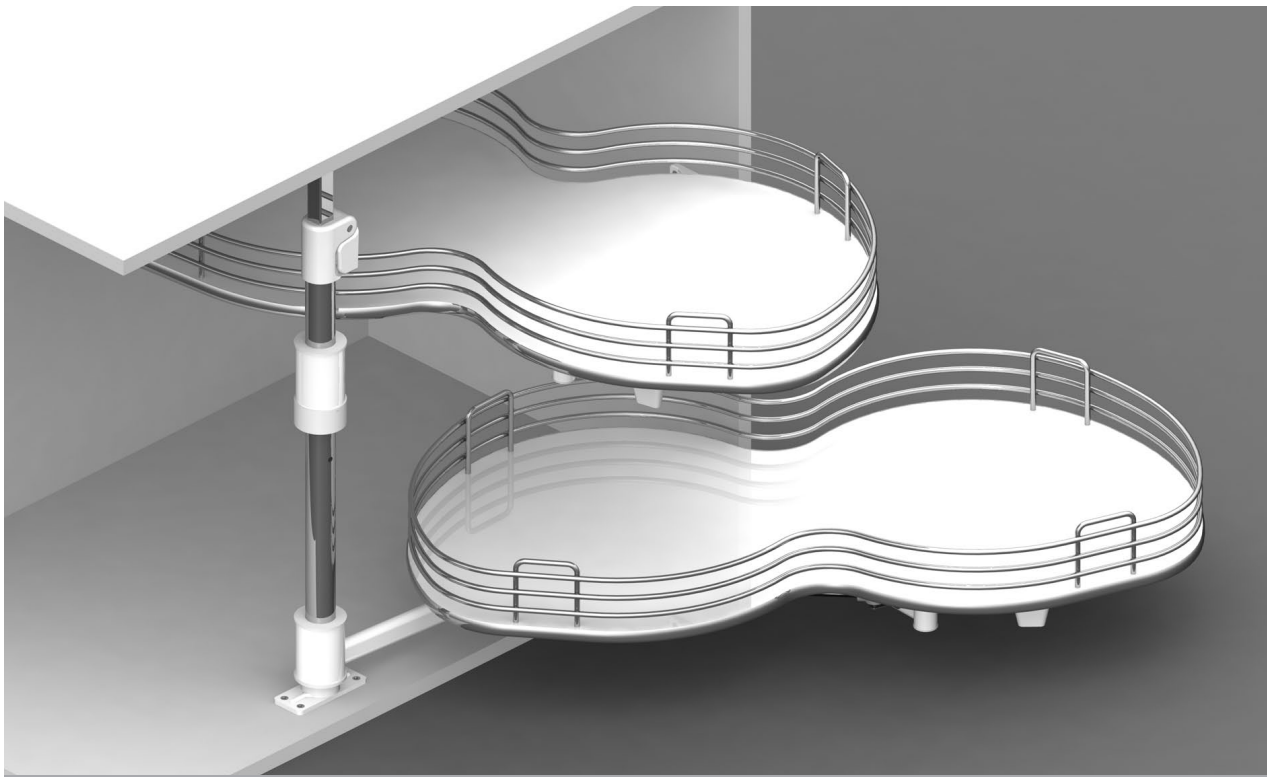

Installation Complete !! ENJOY YOUR GO FLOW !!

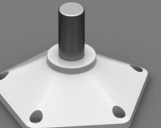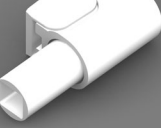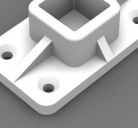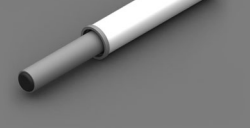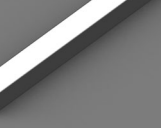 Bush Quantity : 1 Piece	 Gas Spring Quantity : 2 Pieces	 Hinge Arm Quantity : 2 Pieces	 Pentagon Flange Quantity : 4 Pieces
 Pin Quantity : 1 Piece	 Pipe Arm Quantity : 2 Pieces	 Pipe Bottom Bracket Quantity : 1 Piece	 Pipe Clamp Quantity : 1 Piece
 Pipe Top Bracket Quantity : 1 Piece	 Round Pipe Quantity : 1 Piece	 Shock Absorber Quantity : 4 Pieces	 Square Pipe Quantity : 1 Piece
 Stopper Quantity : 4 Pieces	 Tray Quantity : 2 Pieces		

Go Flow

Installation Guide

Packing List

SpitzeTM
by Everyday