



* Match the front edge of carcase
with the edge of Template,
shown by the ARROW.

GO FLOW

TOP TEMPLATE - RIGHT OPENING
Item Code: MI SGF




* VERY Important Instruction *
Match this arrow with the
INSIDE EDGE of carcase
for screw fixing.

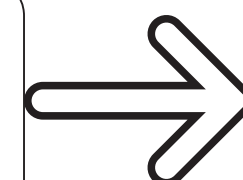


Marking point for fixing screw.



* VERY Important Instruction *
Match this arrow with the
INSIDE EDGE of carcase
for screw fixing.




Marking point for fixing screw.


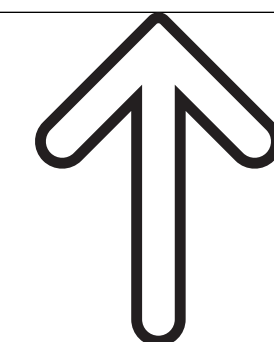



* Match the front edge of carcase
with the edge of Template,
shown by the ARROW.

GO FLOW


TOP TEMPLATE - LEFT OPENING
Item Code: MI SGF

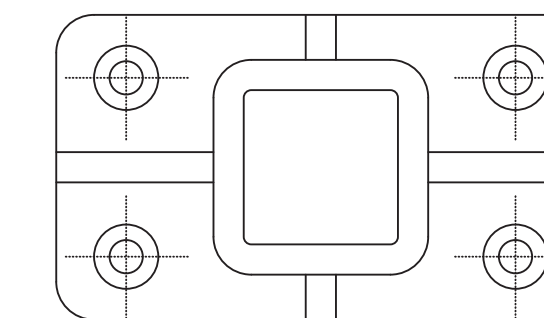

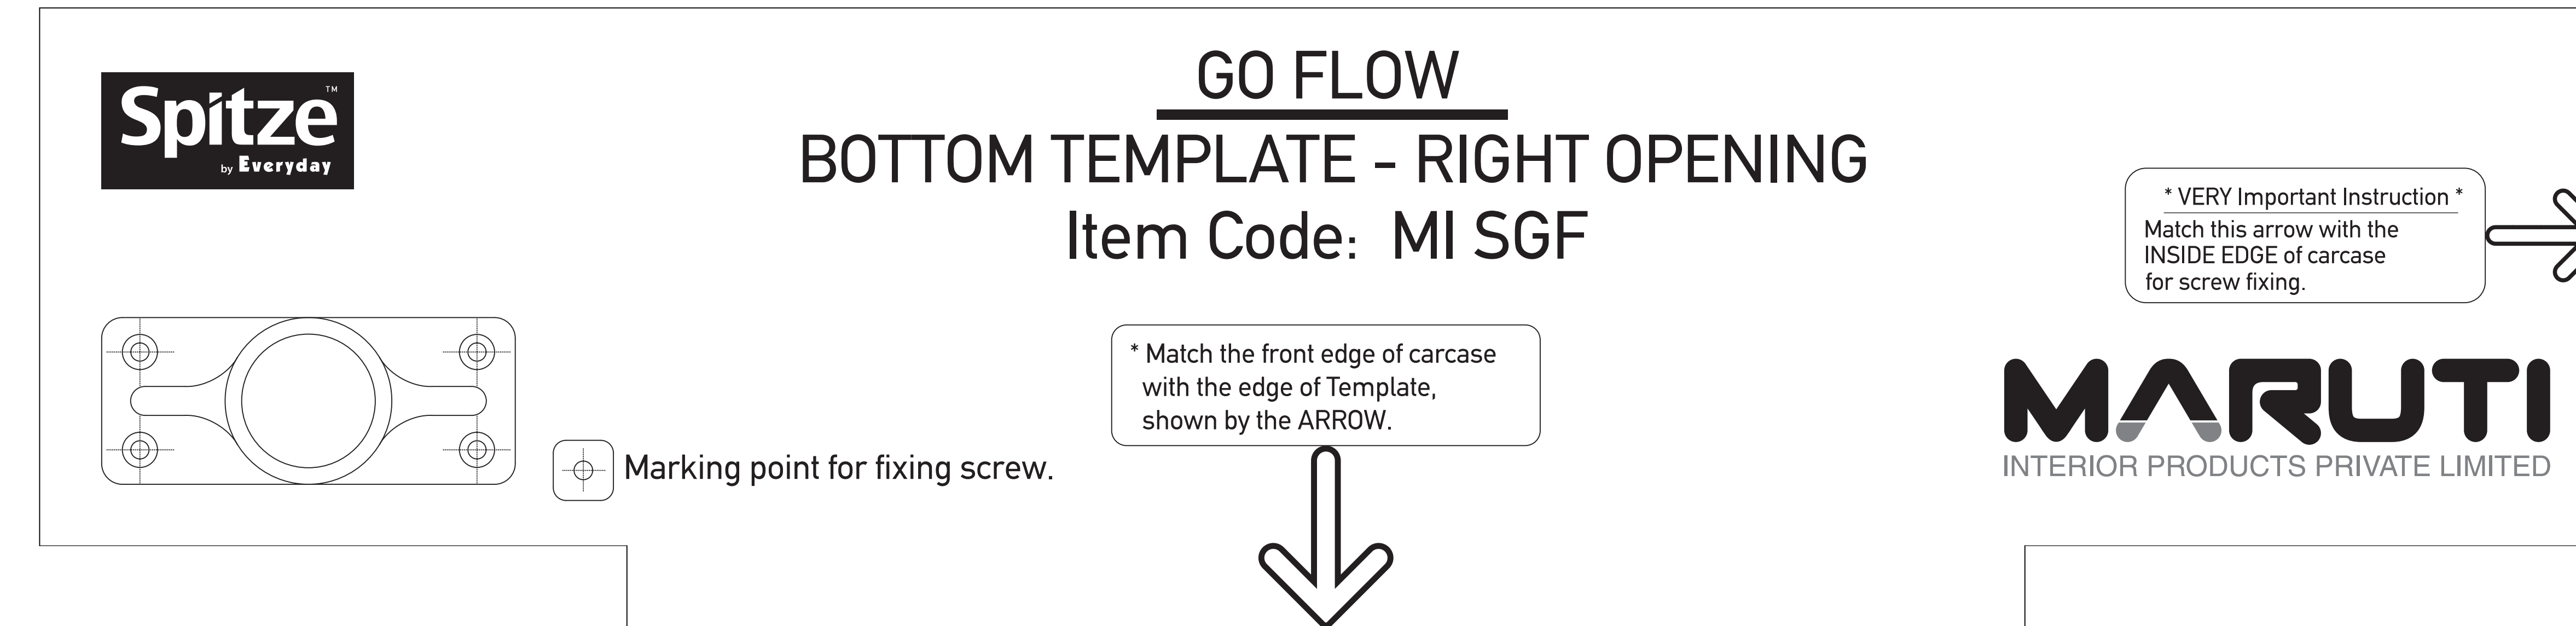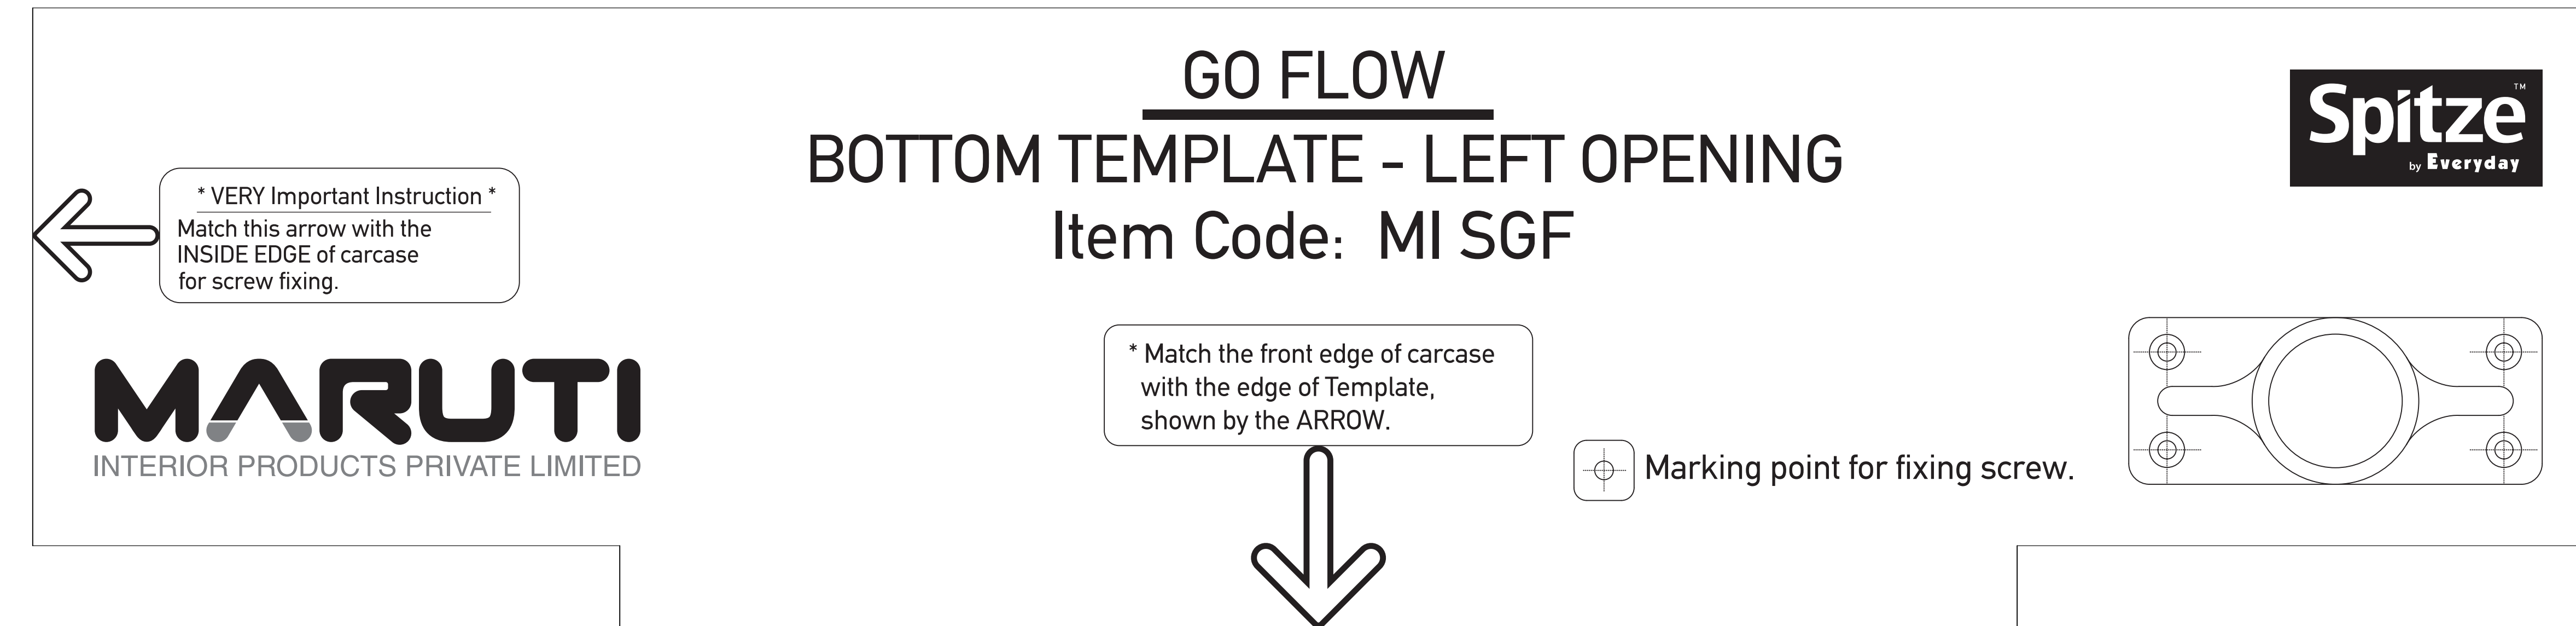

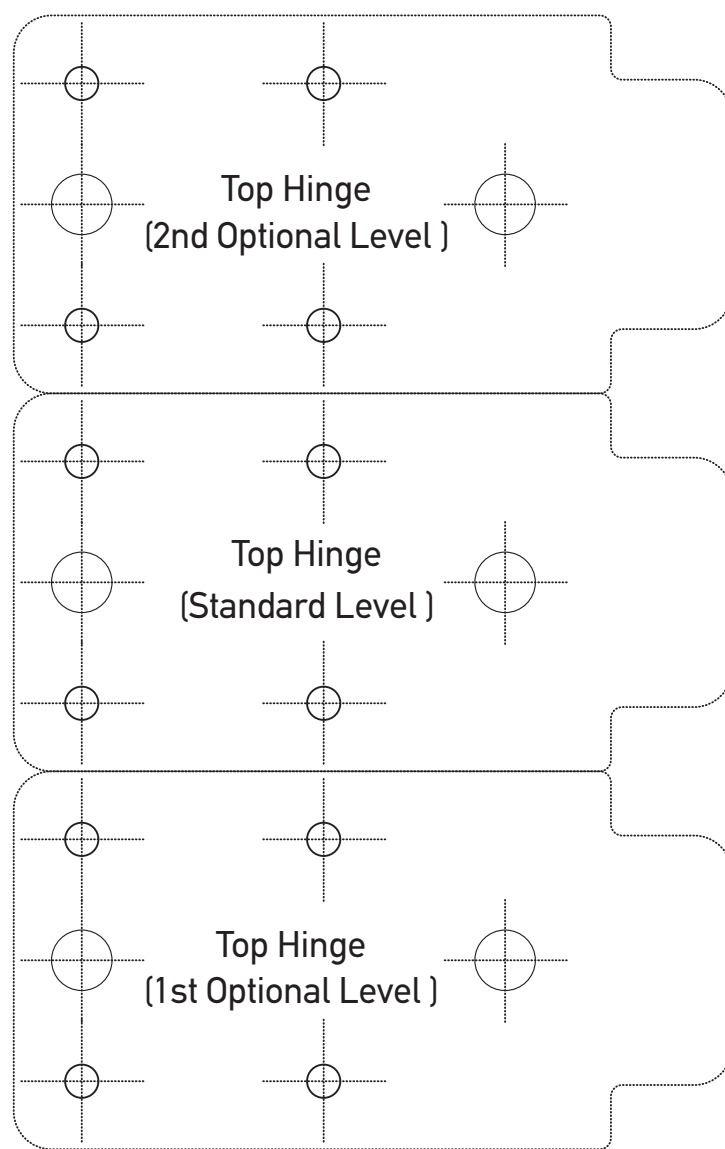


* Match the front edge of carcass
with the edge of Template,
shown by the ARROW.

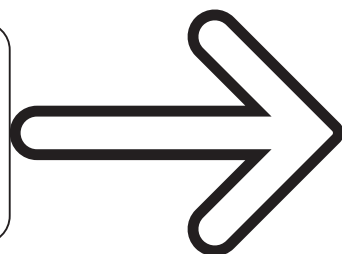


MARUTI
INTERIOR PRODUCTS PRIVATE LIMITED

GO FLOW
SIDE TEMPLATE - RIGHT OPENING
Item Code: MI SGF





Marking point for fixing screw.




Use 8 mm Drill Bit upto 6.5 mm Depth.

*** VERY Important Instruction ***
Match this arrow with the
INSIDE EDGE of carcass
for screw fixing.

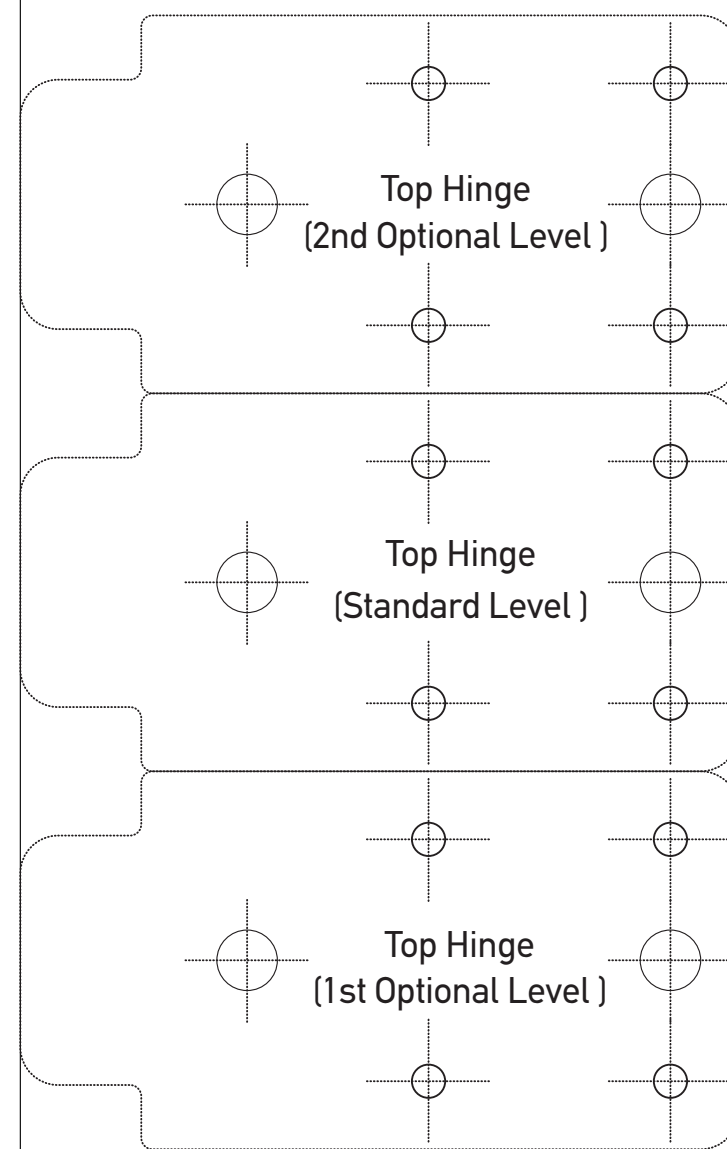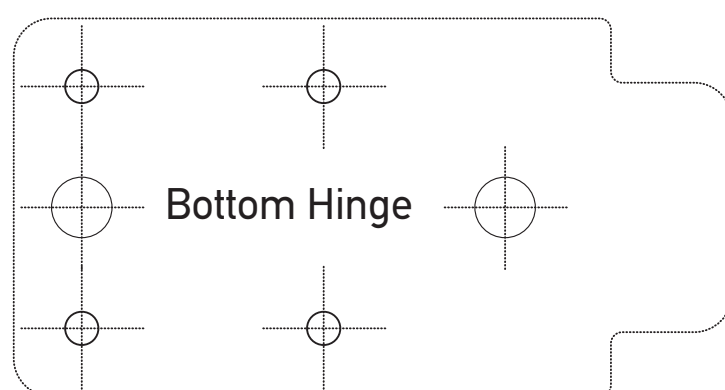


* Match the front edge of carcass
with the edge of Template,
shown by the ARROW.

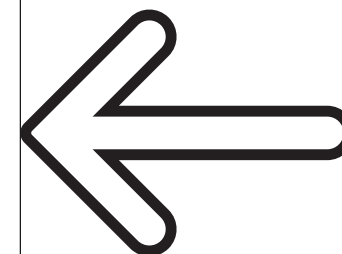


MARUTI
INTERIOR PRODUCTS PRIVATE LIMITED

GO FLOW
SIDE TEMPLATE - LEFT OPENING
Item Code: MI SGF



Marking point for fixing screw.



Use 8 mm Drill Bit upto 6.5 mm Depth.

*** VERY Important Instruction ***
Match this arrow with the
INSIDE EDGE of carcass
for screw fixing.

